

Epoxy Instructions


1. Make sure the tub is dry enough to apply epoxy.

Empty your tub and place a fan inside to expedite the process. Do not allow directly sunlight in the tub, but instead crack the cover to ensure moisture can escape. To see if the wood is dry enough press down on the wood to see if water wells up, if it does wait another day and check again.

2. Pour the entire small bottle into the large bottle and shake well to mix.

3. Use the squeeze cap.

4. Apply a small bead of epoxy all the way around where the vertical boards meet the floor. If the epoxy turns milky the tub is not dry enough.

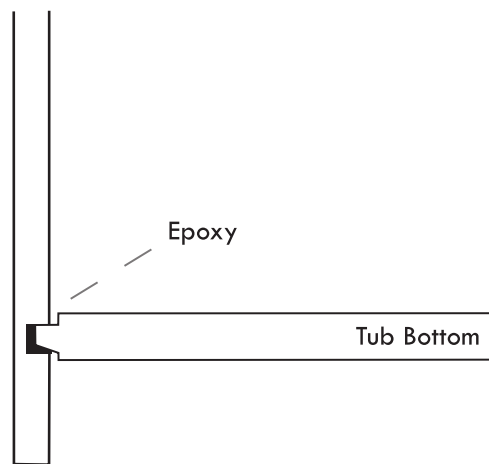

5. Allow to dry for 24 hours and refill the tub.