

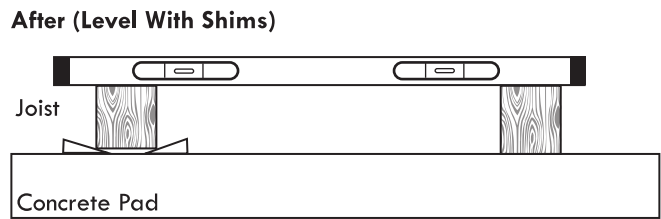
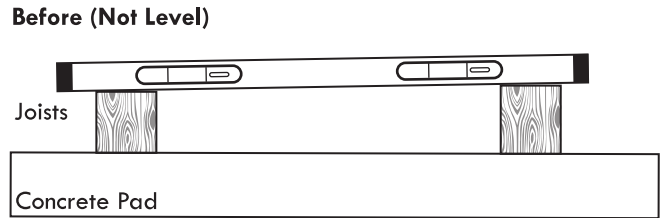


Ofuro Instructions


1. Place supports about 6" from the either edge of the tub.
2. Using non-cedar shims, level the supports by shimming along the length of them.

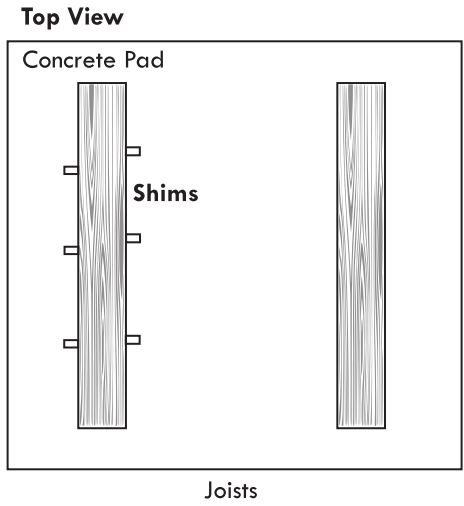

3. Place tub on top.

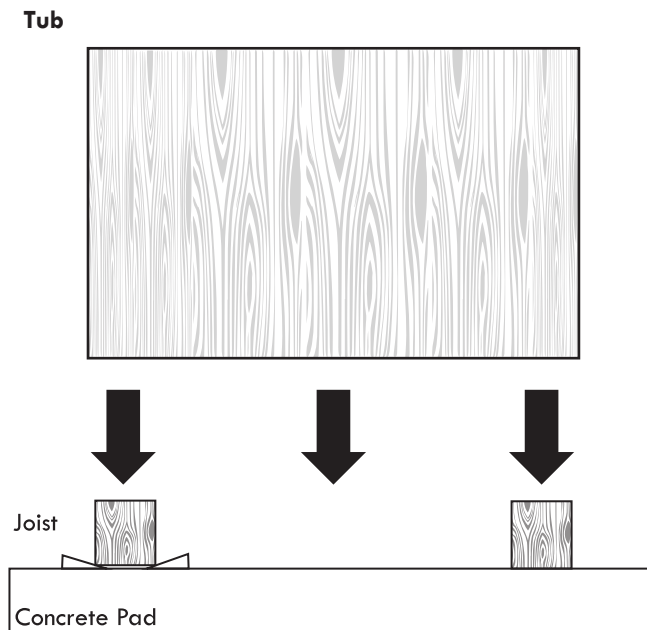

4. Install the drain. The rubber gasket goes on the inside of the tub, and Teflon® on the outside.

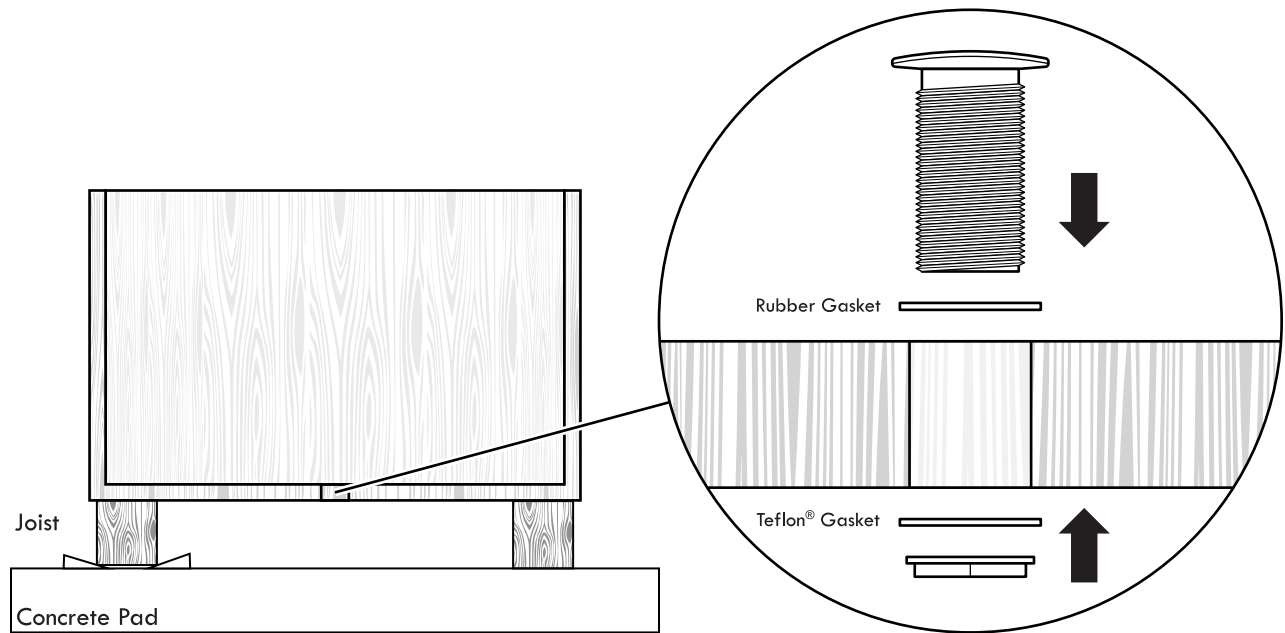

5. If applicable, connect drain to sewage. Connection to stock drain is 1 1/4".